

LASER HELP SHEET

- There are 2 Lasers. The red hulled one is in berth 192 and the white one is next to it. They both have red covers.
- There are 2 Full sails and 2 Radial sails rolled on tubes on the racks in the boat-shed. There are 2 Full and 1 Radial mast bottom sections, either with the boats or in the boat-shed. If a mast bottom section does not have a kicker attached you may need to swap one from another bottom section
- The rudders and daggerboards are also stored in the boat-shed

Before launching

- Check the bung is in
- Keep mast foot clean and off the ground at all times
- Slide sail onto mast, aligning head of sail with the kicker
- Mast **must** be kept vertical as stepped to avoid lifting the deck off!
- Important Ensure rudder and daggerboard retaining lines are attached. The foils do **not** float if detached from boat. This is an insurance requirement

After use

- If leaving boat afloat you may roll it onto its side, ensuring the hull stays afloat and the ground is clean underneath the sail
- When returning to shore, release kicker, head into wind & fend off to avoid hitting the jetty
- Please sponge or hose the boat clean
- Remove bung and raise bow to drain water out
- Please try to dry wet sails, but without letting them flap
- Roll sail onto its tube (align battens with tube) and **return sail, foils and tiller, to boat-shed - an insurance requirement**
- Re-fit cover and secure tightly to prevent ponding of rainwater

Please report any problems on the hire record sheet